

WIRELESS MICROPHONE ACCESSORIES & PARTS MATRIX

MICROPHONE MODEL NUMBER	WINDSCREEN	SINGLE TIE CLIP	DUAL TIE CLIP	CARTRIDGE	REPLACEMENT CABLE	CONNECTOR	MISCELLANEOUS ACCESSORIES
WBH53	RPM304 RPM306	RPM510 RPM512	RPM510 RPM512	RPM208 RPM212 RPM220 RPM214		WA330	RPM132, RPM134, RPM136 RPM138, RPM550, RPM560
WBH54	RPM316 RPM318	RPM510 RPM512	RPM510 RPM512			WA330	RPM646, RPM648 RPM550, RPM560
WCM16	36A624					WA330	
WL50B	RPM304	RPM500	RPM500			WA330	MM=90A4694, RPM208, RPM220
WL50T	RPM306	RPM502	RPM502			WA330	MM=90B4694, RPM212, RPM214
WL50W	RPM308	RPM504	RPM504			WA330	MM=90C4694, RPM216, RPM218
WL51B	RPM304	RPM500 RPM510	RPM500			WA330	MM=90A4694
WL51W	RPM306	RPM504 RPM514	RPM504			WA330	MM=90A4694
WL93	RK355WS	RK354SB	RK307DB			WA330	
WL93T	RK304T	RK304T				WA330	
WL183	RK183WS RK261BWS	RK183T1	RK183T2	R183B	C122	WA330	
WL184	RK183WS RK261BWS	RK183T1	RK183T2	R184B	C122	WA330	
WL185	RK183WS RK261BWS	RK183T1	RK183T2	R185B	C122	WA330	
WB98H/C	RK183WS			RPM108		WA330	HC=RPM540, RPM440 = Pre-Amplifier 65A1963 = Snap-In Holder
WH20QTR	RK318WS						BA=RPM100; WF=RPM600 HB=RK319
WH20TQG	RK318WS					WA330	BA=RPM100; WF=RPM600 HB=RK319
WH30TQG	90WP1371					WA330	WF=RPM600; HB=RK319

HC = Horn Clamp
DM = Drum Mount
SMT = Shock Mount

BA = Microphone and Boom Assembly
WF = Headband and Wireframe
HB = Headband
MM = Magnet Mount